
Design your own
**Embedded Linux Control
Centre**
on PC and Raspberry Pi



Hans Henrik Skovgaard



an Elektor Publication

LEARN | DESIGN | SHARE

List of figures/images

Figure 1: DSL 3.4.12 desktop after booting up (Fluxbox desktop)	44
Figure 2: Where to find "Install to Hard Drive"	45
Figure 3: Hard drive installation	46
Figure 4: Boot loader installation	47
Figure 5: GRUB boot loader start-up picture	48
Figure 6: Entering passwords for "root" and user "dsl"	48
Figure 7: DSL Install options	49
Figure 8: Dillo "Getting started"	50
Figure 9: DSL X Setup: Xvesa as xserver	51
Figure 10: DSL X Setup: No USB mouse	51
Figure 11: DSL X Setup: Yes use IMPS/2 mouse	51
Figure 12: DSL XSetup: Choose 1024x768 screen resolution	52
Figure 13: DSL X Setup: Chosen 32-bit as colour depth	52
Figure 14: DSL X Setup: No to dpi	52
Figure 15: DSL X Setup: Choose keyboard	53
Figure 16: Xvesa display setup	54
Figure 17: Netcard Config	54
Figure 18: Ping elektor.com	55
Figure 19: Changing the security level at XAMPP	61
Figure 20: XAMPP standard homepage	62
Figure 21: phpMyAdmin homepage	62
Figure 22: Idconfig in verbose mode	65
Figure 23: Download progress of gcc1.dsl	66
Figure 24: Configuration of the libusb installation scripts	69
Figure 25: LIBUSB make install guidance	70
Figure 26 Configuration of the libhid installation scripts	71
Figure 27: LIBHID make install guidance	72
Figure 28: Success full database installation	75
Figure 29: SSH login to DSL	78
Figure 30: SSH-server activated	79

Figure 31: VNC server after start up	80
Figure 32: Windows VNC viewer start	81
Figure 33: VNC-server information during connect and release	81
Figure 34: PuTTY session settings for VNC tunnel	82
Figure 35: PuTTY tunnel settings for VNC tunnel	83
Figure 36: RealVNC in tunnel mode	83
Figure 37: TightVNC in tunnel mode	84
Figure 38: Ultr@VNC in tunnel mode	85
Figure 39: "Raspberry PI" model B rev 1 (courtesy of Wikipedia)	87
Figure 40: "Win32 disk manager" creating SD-card for Raspberry PI	90
Figure 41: Raspberry PI SD-card successfully created	90
Figure 42: Example of Firewall/Routers DHCP client overview	91
Figure 43: Xming welcome screen	91
Figure 44: Xming component selection	92
Figure 45: Xming additional tasks	92
Figure 46: Xming display settings	93
Figure 47: Xming session type	93
Figure 48: Xming program start	94
Figure 49: Xming additional parameters	95
Figure 50: Xming finish configuration	95
Figure 51: PuTTY SSH security alert	96
Figure 52: Raspberry PI Xserver screen via Xming	96
Figure 53: Warning when closing Xming	97
Figure 54: Using PuTTY to log into the Raspberry Pi	98
Figure 55: Raspberry Pi PuTTY login	98
Figure 56: Logged in on the Raspberry Pi via PuTTY	99
Figure 57: Installation of the xrdp server	99
Figure 58: Remote Desktop Connection startup	100
Figure 59: Remote Desktop Connection warning	100
Figure 60: Remote Desktop login	101
Figure 61: "raspi-config"	104

Figure 62: Raspberry PI “apt-get update”	106
Figure 63: Raspberry PI “apt-get install Apache”	106
Figure 64: Raspberry PI Apache install finished.	107
Figure 65: Apache at Raspberry PI “It works!”	107
Figure 66: Raspberry PI “apt-get install MySQL-server”	108
Figure 67: Raspberry PI MySQL root password	109
Figure 68: Raspberry PI MySQL install finished	110
Figure 69: Raspberry PI “apt-get install php5”	111
Figure 70: Raspberry PI php5 installation done.	111
Figure 71: Raspberry PI “apt-get install phpmyadmin”	112
Figure 72: Raspberry PI phpmyadmin database config.	113
Figure 73: Raspberry PI phpmyadmin database password	113
Figure 74: Raspberry PI phpmyadmin installation done	114
Figure 75: Raspberry PI phpmyadmin login	115
Figure 76: Installing MySQL libraries	117
Figure 77: Installation of libusb in a development version	118
Figure 78: Configuration of the makefile for libhid.	119
Figure 79: Compilation of the libhid library.	121
Figure 80: Show attached USB devices	122
Figure 81: Changes to “test_libhid.c”	122
Figure 82: Compilation of the test_libhid.c file	123
Figure 83: The outcome of test_libhid command.	123
Figure 84: Success full database installation.	126
Figure 85: Linux live USB creator	131
Figure 86: Lubuntu installation start	131
Figure 87: Lubuntu live start	132
Figure 88: Installing Lubuntu start	133
Figure 89: Preparing to install Lubuntu	133
Figure 90: Lubuntu installation type	134
Figure 91: Lubuntu “Where are you?”	134
Figure 92: Lubuntu keyboard layout	135

Figure 93: Lubuntu “who are you?”	135
Figure 94: Lubuntu installation complete	136
Figure 95: Lubuntu installing Apache	137
Figure 96: Lubuntu Apache installed	137
Figure 97: Lubuntu Apache default page	138
Figure 98: Ready to install the MySQL-server.	139
Figure 99: New password for the MySQL “root” user	140
Figure 100: Ready to install the php5	141
Figure 101: php5 installed and Apache restarted	141
Figure 102: Ready to install the phpmyadmin.	142
Figure 103: Selecting Apache to run phpMyAdmin.	142
Figure 104: Configure database for phpMyAdmin	143
Figure 105: Password of the database’s administrative user.	143
Figure 106: phpMyAdmin installed	144
Figure 107: Login to phpMyAdmin.	145
Figure 108: IEEE 1284 B female: Pin 1 at the upper right and pin 19 at the lower right .	149
Figure 109: IEEE 1284 A male: Pin 1 at the upper right and pin 14 at the lower right . .	149
Figure 110: Simple parallel port debug interface.	149
Figure 111: LED polarity	150
Figure 112: LED parallel port debug interface.	150
Figure 113: Arduino UNO board. Courtesy Arduino	155
Figure 114: Arduino USB driver installation	157
Figure 115: Arduino IDE installation completed.	157
Figure 116: Arduino LED test interface (Courtesy of Arduino).	158
Figure 117: Arduino serial interface.	160
Figure 118: Arduino USB device driver and firmware overview	162
Figure 119: Raspberry Pi Pin header on the Model B	167
Figure 120: Raspberry Pi pin header on the Model B+	169
Figure 121: Raspberry PI correct and wrong wiring of input interface	171
Figure 122: Raspberry PI with simple LED debug interface.	172
Figure 123: Raspberry PI installing WiringPi	174
Figure 124: Raspberry Pi WiringPi build	175

Figure 125: Raspberry PI “gpio -v” and “gpio readall”	176
Figure 126: Lamps control web interface	179
Figure 127: I/O control web interface (Arduino interface)	181
Figure 128: I/O control web interface (Raspberry Pi I/O interface)	182
Figure 129: I/O control web interface (parallel interface)	183
Figure 130: Block diagram of the mains switch controller.	185
Figure 131: Remote controller switch	186
Figure 132: Connection between an optocoupler and remote controller	187
Figure 133: The use of Iptout_blinkOnce to turn lamps on/off.	189
Figure 134: The use of blinkOnce to turn lamps on/off.	190
Figure 135: 4N33 optocoupler	191
Figure 136: 4N33 pin layout (Fairchild Semiconductor)	192
Figure 137: 4N33 package layout. (Fairchild Semiconductor)	192
Figure 138: Remote controller switch interface	192
Figure 139: Wake-Up on LAN connector on MS6119 motherboard.	194
Figure 140: LAN PCI card with WOL connector in upper right corner	195
Figure 141: WOL cable from “hanelore.be”.	195
Figure 142: Sound card cable	196
Figure 143: Reshaped Sound Card connector	197
Figure 144: LAN card fitted with modified Sound Card cable.	197
Figure 145: Wiring of a WOL cable	198
Figure 146: Home-made WOL cable installed	199
Figure 147: Ip value out of range	206
Figure 148: DS18B20 pin configuration. (Courtesy Maxim IC)	209
Figure 149: Connecting the DS18B20 to a 1-wire network (Courtesy of Maxim IC)	210
Figure 150: Elektor Thermo-Snake PCB	211
Figure 151: Simple web interface to verify Thermo-Snake hardware	213
Figure 152: Raspberry PI connected to DS18B20 (bottom view)	214
Figure 153: Breadboard with DS18B20 and Raspberry Pi	215
Figure 154: Reading the temperature with a DS18B20	216
Figure 155: Simple web interface to verify the ds18b20 sensor	218
Figure 156: Several DS18B20 connected to the Raspberry Pi	219

Figure 157: OpenSSL Library header download 221

Figure 158: Final questions during “make install” 222

Figure 159: sSMTP -v output 225

Figure 160: test e-mail script 227

Figure 161: Raspberry PI “apt-get install ssmtp” 228

Figure 162: Raspberry PI ssmtp install finished 228

Figure 163: Interface cables to a C65 231

Figure 164: USB to RS232 converter 231

Figure 165: Communication program (DSL): microcom 232

Figure 166: Minicom installation 233

Figure 167: Minicom installation completed 233

Figure 168: Raspberry PI minicom interfacing to /dev/ttyUSB0 235

Figure 169: USB connection mode: Modem 236

Figure 170: Huawei E1752 data dongle 237

Figure 171: dmesg: Huawei E1752 data dongle found 239

Figure 172: lsusb with Huawei E1752 acting as memory dongle 239

Figure 173: Install usb-modeswitch 240

Figure 174: Install usb-modeswitch finished 240

Figure 175: dmesg where Huawei E1752 is attached to ttyUSB0 241

Figure 176: lsusb with Huawei E1752 acting as data dongle 242

Figure 177: Raspberry PI minicom verifying /dev/ttyUSB0 243

Figure 178: Editing rc.local to unbind/bind the Huawei E1752 data dongle 244

Figure 179: Running smsd which sends and receives an SMS 253

Figure 180: Install gnokii 254

Figure 181: gnokii installation finished 255

Figure 182: gnokii –identify command 256

Figure 183: send test SMS 257

Figure 184: gnokii-smsd installation 258

Figure 185: gnokii-smsd installation finished 258

Figure 186: gnokii-smsd-mysql installation 259

Figure 187: gnokii sms mysql database installation 260

Figure 188: gnokii file-based sms-gateway interface	261
Figure 189: gnokii MySQL sms-gateway interface	264
Figure 190: rc.local after smsd gnokii command added	265
Figure 191: How to find USBview after installation	268
Figure 192: USBview screen dump	268
Figure 193: lsusb output	269
Figure 194: Download of package "dsl-dpkg.dsl".	270
Figure 195: Download of package "xawtvdebs.dsl"	270
Figure 196: New menu item with "xawtv install".	271
Figure 197: Installation of the application xawtv.	272
Figure 198: USB web camera driver installation	273
Figure 199: Loaded modules including spca5xx.	274
Figure 200: Screen dump showing the xawtv application running	275
Figure 201: Unpacking of spcaview	277
Figure 202: Compiling the spcaview utility pack	278
Figure 203: The result of the set command	279
Figure 204: Start of spccat. (killed with "ctrl-c" after 2 pictures taken)	280
Figure 205: Still picture streaming test application	281
Figure 206: spcaserv start-up.	284
Figure 207: spcaview start up.	285
Figure 208: 3.5" disk drive connections (Top cover taken off).	287
Figure 209: Stepper motor web test interface.	290
Figure 210: One mechanical solution for the panning of the web camera	291
Figure 211: Connection of the spoke to the read head.	292
Figure 212: Error while compiling mjpg-streamer from source forge	293
Figure 213: Download of mjpg-streamer software with "wget".	294
Figure 214: Installation of libjpeg8-dev	295
Figure 215: Installation of libv4l-dev	295
Figure 216: Start of mjpg-streamer with commands	297
Figure 217: CPU load.	299
Figure 218: File properties	300

Figure 219: Download progress of cron30.dsl.	303
Figure 220: ELCC login screen	311
Figure 221: ELCC System status	312
Figure 222: ELCC Create or Update users.	314
Figure 223: ELCC user not allowed access to system setup	314
Figure 224: ELCC language management interface	315
Figure 225: ELCC video (mjpg_streamer) setup	315
Figure 226: ELCC video (mjpg_streamer) edit	316
Figure 227: ELCC video (mjpg_streamer) empty device drop down	317
Figure 228: ELCC temperature node setup interface	318
Figure 229: ELCC temperature node edit interface	319
Figure 230: ELCC lamp configuration	320
Figure 231: ELCC lamp edit interface.	321
Figure 232: ELCC System Setup tools interface.	322
Figure 233: ELCC System Setup tools dummy interface.	322
Figure 234: ELCC log file interface.	323
Figure 235: ELCC video operations	324
Figure 236: ELCC temperature interface	324
Figure 237: ELCC lamps control interface.	325
Figure 238: ELCC Operation tools interface	326
Figure 239: Web camera interface for still pictures	328
Figure 240: Web camera interface for streaming of video.	329
Figure 241: ELCC exit	330
Figure 242: ELCC shutdown system.	331
Figure 243: ELCC power down warning	331
Figure 244: ELCC shutting down message	331
Figure 245: PuTTY Connection Fatal Error	332
Figure 246: Fluxbox menu (Right click to get it)	335
Figure 247: emelfm icon	335
Figure 248: emelfM.	336
Figure 249: Midnight Commander	337

Figure 250: PCManFM	339
Figure 251: Result of the command "ls -al"	340
Figure 252: Result of the command "ps"	341
Figure 253: Result of the command "pwd"	342
Figure 254: Result of the command "Find"	343
Figure 255: Result of the command <code>ldconfig -help</code>	344
Figure 256: Result of the command <code>dpkg --get-selections</code>	345
Figure 257: Download progress of IceWM	349
Figure 258: IceWM menu structure before "build menu"	351
Figure 259: <code>flux2icewm</code> script.	351
Figure 260: IceWM menu structure after "build menu"	352
Figure 261: <code>mount</code> showing <code>icewm</code> under <code>/opt</code>	353
Figure 262: Internet vs Intranet	355
Figure 263: Standard port forwarding	356
Figure 264: Port forwarding example.	357
Figure 265: IEEE 1284 B female: Pin 1 at the upper right and pin 19 at the lower right .	360
Figure 266: IEEE 1284 A male: Pin 1 at the upper left and pin 14 at the lower right . .	360
Figure 267: Hardware Interface Schematics	361
Figure 268: Hardware interface PCB	362
Figure 269: Hardware interface PCB layout seen from comp side (Size: 72x80 mm) . .	363
Figure 270: USB tired star topology	365
Figure 271: Pin configuration of the USB connectors Standard A/B, viewed from face of plug (Courtesy wikipedia.org)	366
Figure 272: USBview listing of Thermo-Snake.	368
Figure 273: USB architecture overview	369
Figure 274: USB trace of determining sensors 64 bit serial ID	370
Figure 275: USB trace of temperature measurement.	371
Figure 276: Block diagram of <code>findcensor.c</code>	376
Figure 277: Block diagram of <code>measuretemp.c</code>	378
Figure 278: <code>temp_read_background.c</code> block diagram.	381
Figure 279: CentreUser table in the CTRLCentre database	388

Figure 280: Lamps table in the CTRLCentre database 388

Figure 281: Temperature table in the CTRLCentre database 389

Figure 282: Video table in the CTRLCentre database 390

Figure 283: inbox table in the msgsw database 392

Figure 284: multipartinbox table in the msgsw database 393

Figure 285: multipartinbox table in the msgsw database.. 394

Figure 286: Graphical overview of ctrl_centre directory 396

Figure 287: Graphical overview of htdocs directory 397

Figure 288: Graphical overview of htdocs/pc directory. 398

Figure 289: Graphical overview of htdocs/test 399

Figure 290: Graphical overview of htdocs/admin. 399

Figure 291: Graphical overview of htdocs/public directory 400

Figure 292: send_alarm.php block diagram 407

Figure 293: update_lamp_status block diagram 409

Figure 294: Arduino IDE warning 434

Figure 295: sending an SMS via microcom 438

Figure 296: Hard disk partitioning with cfdisk 438

Figure 297: Text after first reboot after a crash 439

Figure 298: Permissions for index.php 442

Figure 299: Permissions shown via a terminal window. 442

List of tables

Table 1: Parallel port pin out.	148
Table 2: Parallel port base 0, 1 and 2	152
Table 3: Arduino output relations	159
Table 4: Raspberry PI Revision 2 Model B pin header.	168
Table 5: Raspberry PI Revision 1 Model B pin header.	169
Table 6: Raspberry PI Model B+ pin header	170
Table 7: Pin out of Wake On Lan connector	196
Table 8: Wake-On_LAN power savings	204
Table 9: Broadcast address port forwarding example.	206
Table 10: Broadcast address port forwarding example with different subnet mask	207
Table 11: tty communication interfaces	236
Table 12: Data for Create NX USB camera	273
Table 13: 3.5" disk drive pin-out.	288
Table 14: Connection between Parallel Port and 3.5" disk drive	288
Table 15: 3.5" disk drive power connections.	289
Table 16: Parallel port pin out.	359
Table 17: Parallel port Base 0, 1, 2	360
Table 18: Conversion between bit and byte to send.	374